

rehabhire & sales

YOUR
LEADING
HEALTHCARE
EQUIPMENT
PARTNER




User Manual




1300 000 030 | rehabhire.com.au

YOUR
LEADING
HEALTHCARE
EQUIPMENT
PARTNER


Erect your clothesline

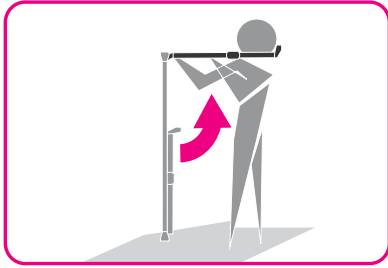


Hold the clothesline vertically and extend the outer leg

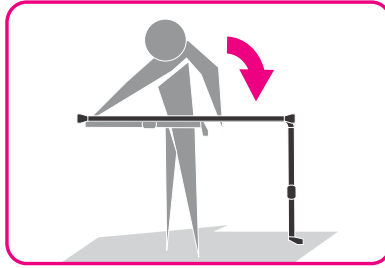

Tip the clothesline horizontally onto the extended leg

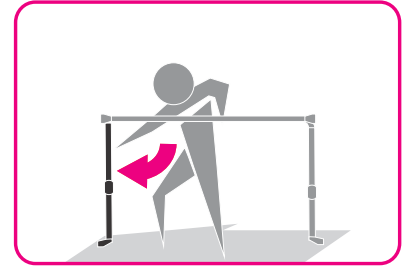


Extend the inner leg to touch the floor

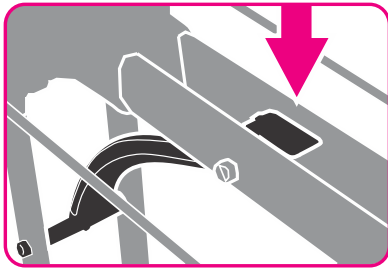


Lock the legs in place by depressing the tab (do this on both sides)


Adjust the height

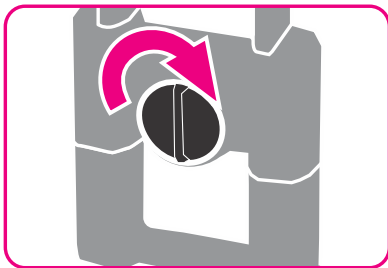

Turn the ratchet clockwise to release the lock

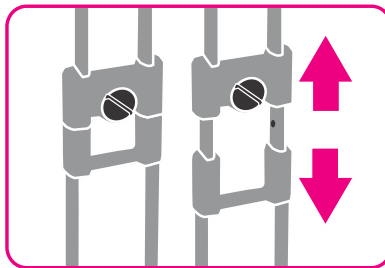

Extend the legs up or down to the preferred height

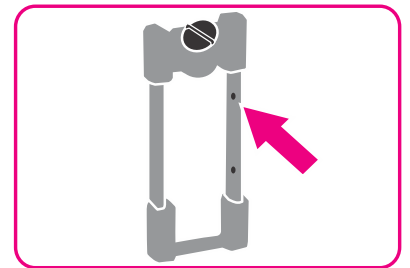


Select a height from the four options (listen for the click)




Release the ratchet to lock the legs into place

To store EcoDry™ clothesline, lift the tabs and collapse the inner leg, followed by the outer leg (reverse of setup).

Tension the line

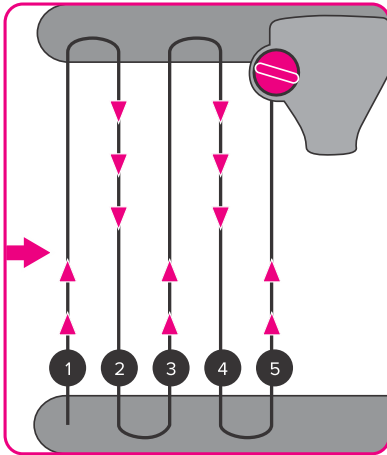


1. Gently pull line 1 towards the direction of the arrows as detailed above.
2. Move to line 2, gently pull until the slack is transferred from line 1 to line 2.
3. Repeat this for lines 3 and 4 until all slack is transferred to line 5.

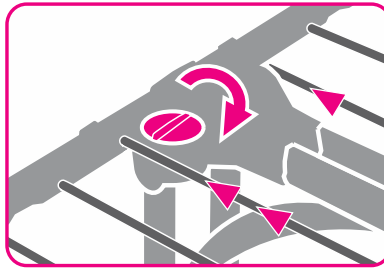

4. Turn ratchet clockwise to remove slack from Line 5 (DO NOT over tighten).


WARNING: DO NOT tension unless the line is slack.

Anchor

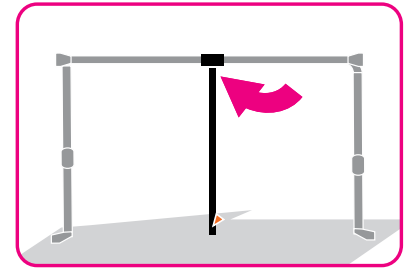


On windy days secure the line by looping the supplied anchor strap through the orange block in the centre of the frame. Anchor the other side of the strap to the ground using a tent peg, sandbag or weights.

Hidden Castors

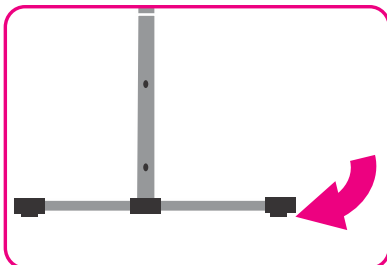

The hidden castors on both ends will glide over most smooth surfaces.

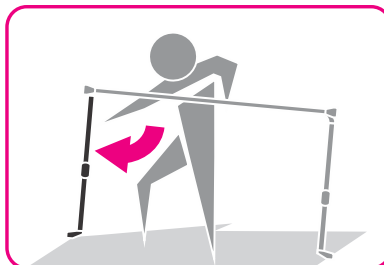

To move, lift either end and pull to your desired location.

Folding



Side A



Side B

When folding your EcoDry, close side A before side B to avoid damaging your airer.

Helpful Hints

- Large items such as sheets and towels should be placed on the inner lines and smaller items on the outer lines for improved stability.
- Towels and floor mats will dry much quicker if placed horizontally.
- Quilts, quilt covers, doonas, woolen underlays and any other large item can be draped over the top of the EcoDry clothesline.
- Do not place the portable clothesline outside on windy days unless it is anchored.
- Attach the strap provided through the loop located under the middle of the main bar and hook to a tent peg, sandbag or other weight.
- The EcoDry clothesline may be stored on two hooks behind a door or on a wall.
- Coat hangers can be used for extra hanging space on the side bars.
- Washing should be evenly balanced on both sides of the clothesline.
- Line tensioners will only work when the lines are loose (follow instructions).



Notes

Lined area for notes.

rehab**hire**&sales

1 300 000 030

320 Lorimer Street Port Melbourne
contact@rehabhire.com.au
rehabhire.com.au

rehab**hire**&sales **REPAIRS AND SERVICE**

REGULAR MAINTENANCE OR REPAIRS

1 300 000 030

Unit 6 | 52 Wirraway Drive Port Melbourne
service@rehabhire.com.au
rehabhire.com.au/repairs-and-service

rehab**installation**

CAN MODIFY EVERY ROOM IN YOUR HOME TO
ENSURE IT IS ACCESSIBLE, SAFE, AND COMFORTABLE

1 300 000 030

320 Lorimer Street Port Melbourne
contact@rehabinstallation.com.au
rehabinstallation.com.au



Registered NDIS Provider